LES TERRASSES DE SAUMUR

HÔTEL – RESTAURANT – SPA

Fonctionnement de la Climatisation

A votre arrivée la climatisation est réglée à la bonne température suivant la chaleur extérieure pour un confort optimal.
Vous pouvez contrôler la puissance du ventilateur et les degrés.
Pour tout problème n'hésitez pas à contacter la Réception.

Mode **HEAT** obligatoire pour activer la climatisation l'hiver, **COOL** pour l'été

Puissance du ventilateur à régler en déroulant le boitier

Réglage température **+ / -**

POWER (allumer ou éteindre)

Boitier déroulant

<u>Afin de ne pas bloquer la soufflerie merci de ne pas toucher aux autres boutons</u>

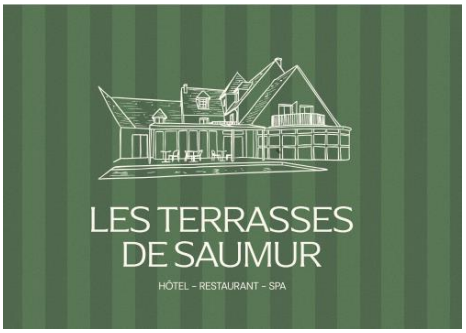

Air- Conditioning

When you arrive the air conditioning is set at the right temperature following the outdoor temperatures for maximum comfort. You can control the fan power and degrees.

For any problems please contact Reception Desk

HEAT mode required to activate in the Winter, COOL mode in the Summer.

FAN power

Temperature adjustment **+ / -**

POWER

Scrolling box
In order not to block the blower please do not touch the other buttons